

Terminalsteuerung im FPI_6: Kurzanleitung

Main Menu

- A **Display status** →
 - B **Display/Modify parameters** →
 - C Format
 - E Streamer tubes conditioning
 - G HV Modules MAP
 - I Crate # [0]
 - L Set protections
 - N Clear alarm
- Also valid: 1=Top, 2=Back

Display Status

	V_{mon}	I_{thon}	V_0	I_0	
Block					
Oben					
Mitte					
Unten					

Also valid: 1=Top, 2=Back

V_0 block [2700]:

V_0 oben [1000]:

V_0 Mitte [1000]:

V_0 unten [1000]:

Spannung ändern:

neue Spannung-RETURN

Spannung beibehalten:

RETURN

Display/Modify Parameters

- A Single Channel
 - C **Group** →
 - E Global absolute
 - F Global relative
- Also valid: 1=Top, 2=Back

Display/Modify Parameters: Group

- A Group name
- C **V_0** →
- D V_1
- F I_0
- G I_1
- I Ramp_up
- J Ramp_down
- L Trip
- N **Status** →
- Q Next group

Also valid: 1=Top, 2=Back

Status "block" is off
Turn it on? [No]

⋮

Status "oben" is off
Turn it on? [No]

⋮

Status "Mitte" is off
Turn it on? [No]

⋮